

User Manual

iPin Spatial Ruler Pro

- Individual Use Mode

Individual Use Mode



- ① Press the “Power button”, the OLED Display will be turned on.



- ② Press the “Function button”, the laser will be turned on. You can see the laser spot on the target.



- ③ **Start to measure:**
Press the “Function button” again, you can hear the “Bi” sound and the laser turns off.
The measurement is complete.



- ④ The distance measurement will be shown on the OLED Display.